


Save money with a **FuelMate** on **EFI Engines**.



Petrol

2001
Mazda B2600
EFI with PR10
for heavy
loads

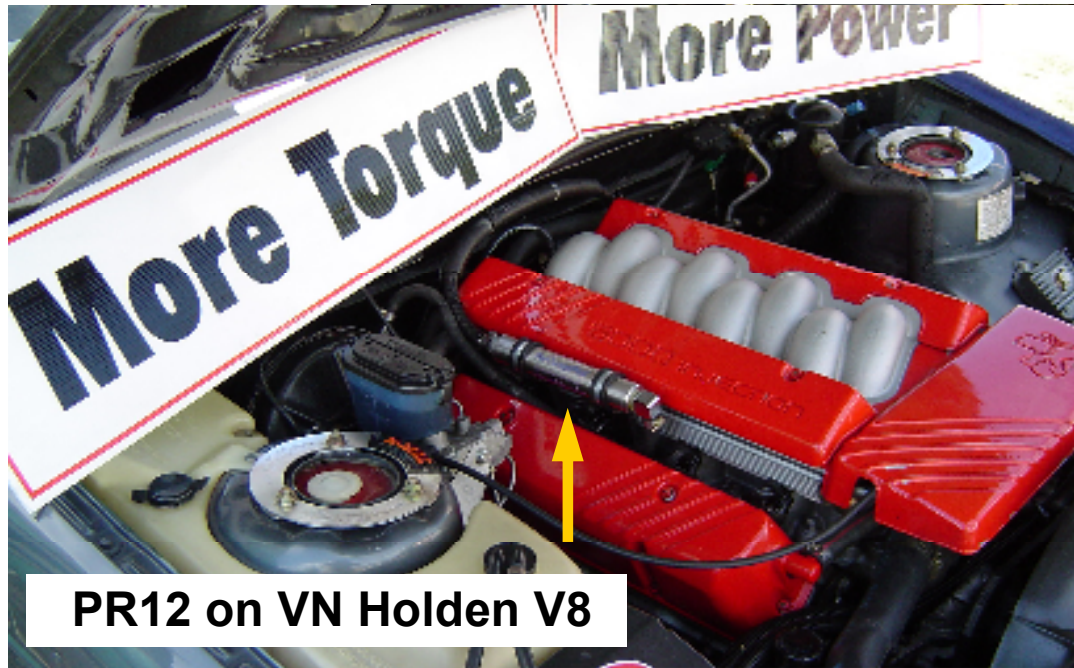

PR12 on VN Holden V8

No matter what
fuel you use we
can improve it
even more,
as we provide
better octane
performance

EFI



2003 Eco-Tech V6 Commodore with
PR12 (Use PR14 or PR18 for towing)