


Save money with a **FuelMate** on **EFI Engines**.



# Petrol

2001  
Mazda B2600  
EFI with PR10  
for heavy  
loads

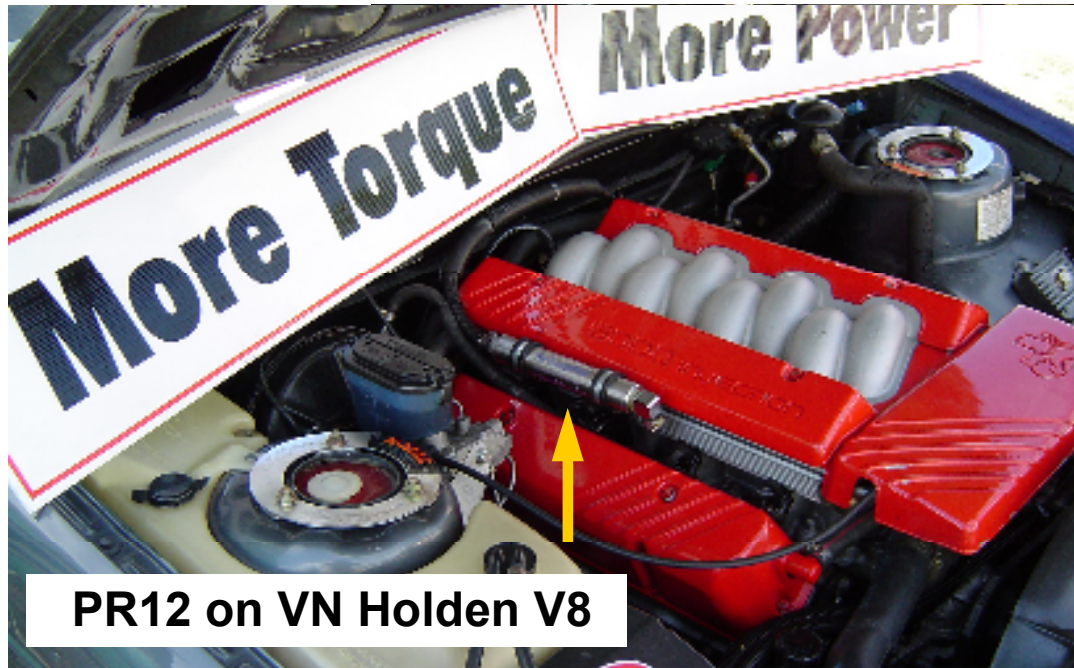

PR12 on VN Holden V8

No matter what  
fuel you use we  
can improve it  
even more,  
as we provide  
better octane  
performance

# EFI



2003 Eco-Tech V6 Commodore with  
PR12 ( Use PR14 or PR18 for towing )